


Tyre Fitment Guide

Your 18" TuffAnt wheels are a close clearance design and as such you need to follow the direction below to ensure:

- the wheels are correctly balanced
- the wheel weights don't interfere with the brake caliper
- that the weights stay on through regular and proper use

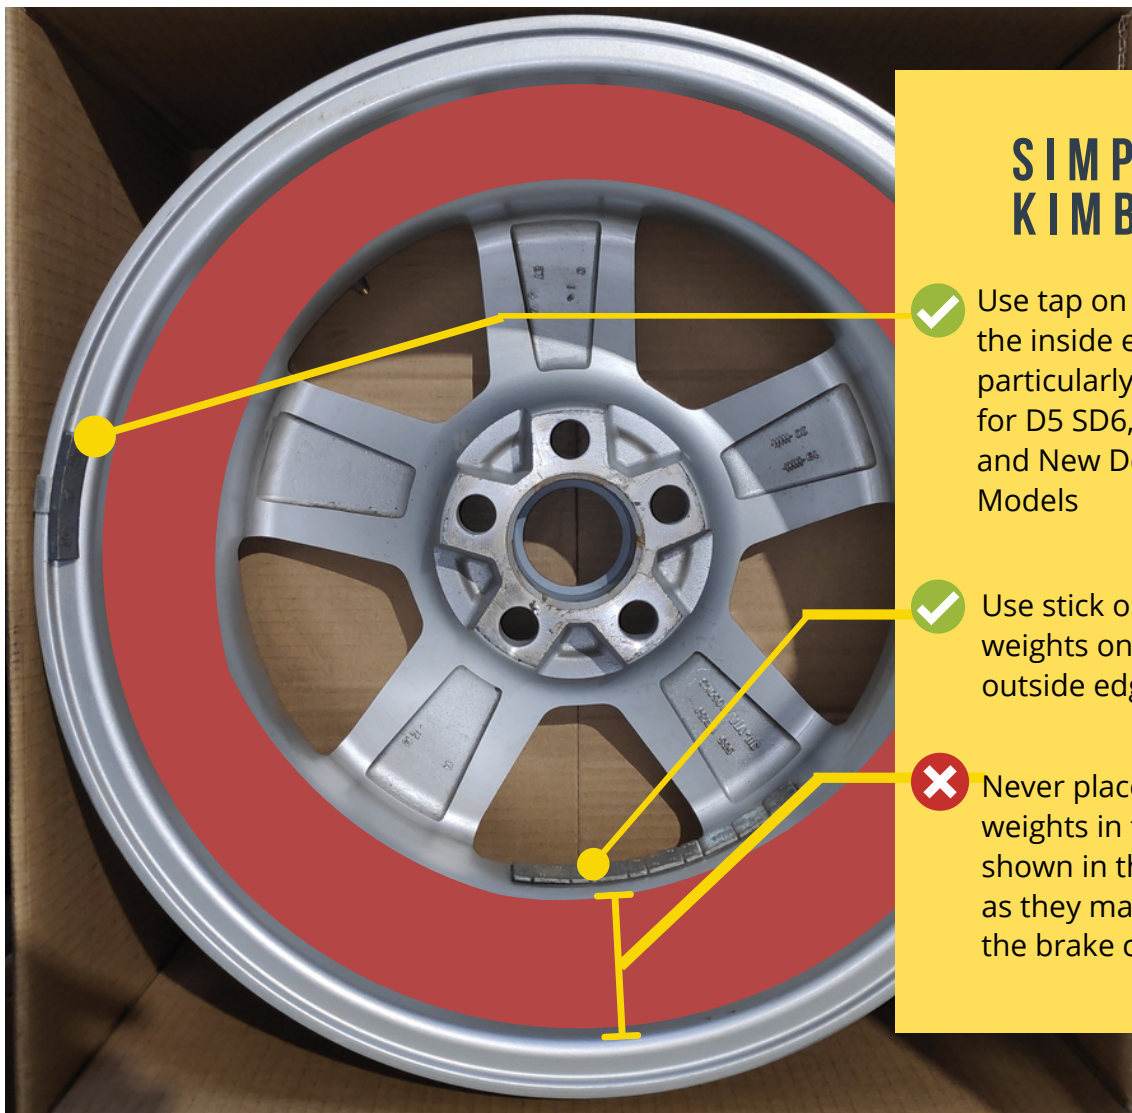

SIMPSON & KIMBERLEY

- ✓ Use tap on weights on the inside edge. This is particularly important for D5 SD6, D5 D300 and New Defender Models
- ✓ Use stick on **slim-line** weights on extreme outside edge
- ✗ Never place wheel weights in the red zone shown in the picture, as they may catch on the brake calipers